





Wiring diagram

 : Terminal strip
 : Connector

 : Connection
 : Field wiring


BLK : Black
 BLU : Blue
 BRN : Brown
 GRN : Green
 PNK : Pink

ORG : Orange
 RED : Red
 WHT : White
 YLW : Yellow

Notes : Refer to the nameplate for power requirements.
 : INDOOR
 : OUTDOOR
 : TRANSMISSION CIRCUIT
 : INTELLIGENT EYE SENSOR
 : WIRELESS REMOTE CONTROLLER
 : SIGNAL RECEIVER

Indoor
 Outdoor
 Transmission circuit
 Intelligent eye sensor
 Wireless remote controller
 Signal receiver

Wiring diagram parts table

A1P~A3P..... Printed circuit board
 BZ..... Buzzer
 FG..... Frame ground
 F1U, F2U..... Fuse
 H1P, H2P..... Pilot lamp
 M1F..... Fan motor
 M1S, M2S, M3S.... Swing motor
 M1..... Stepping motor
 R1T,R2T..... Thermistor
 S25~S200..... Connector
 S1C..... Limit switch
 S1W..... Operation switch
 X1M..... Terminal strip
..... Protective earth

CAUTION

Note that operation will restart automatically if the main power supply is turned off and then back on again.
 HIGH VOLTAGE – be sure to discharge the capacitor completely before repair work.
 Risk of failure or water leakage!
 Do not wash the inside of the air conditioner by yourself.